



### Removal

---

- 1 Press protective padding off of window regulator.

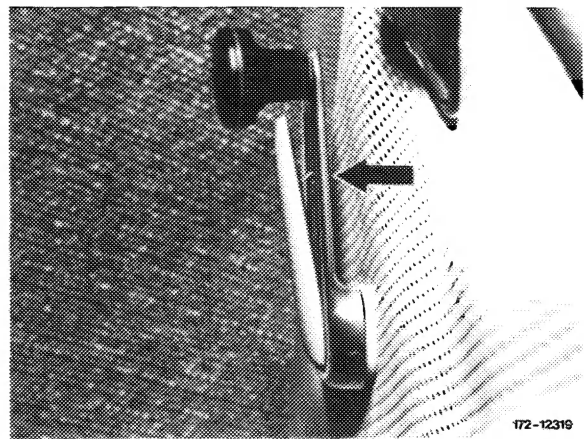

- 2 Pull protective padding toward knob and detach at opening (arrow).
- 3 Take window regulator and spacer off of winding mechanism shaft.

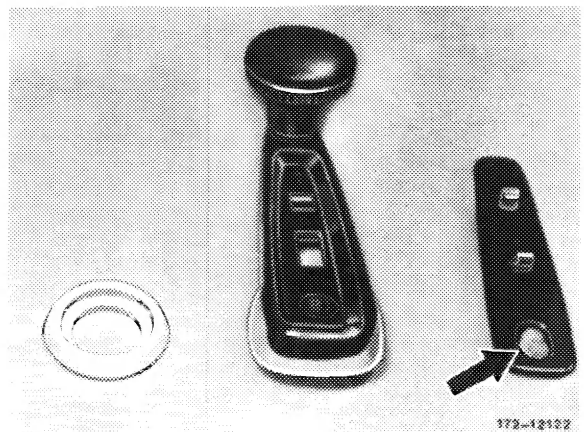

### Installation

---

- 4 Install in reverse sequence.